

(3) Carriage unlocking

< Rotate the purge unit gear frontward to lower the carriage lock pin. The carriage will be unlocked.

Slide the carriage to the left (no screws). >

